


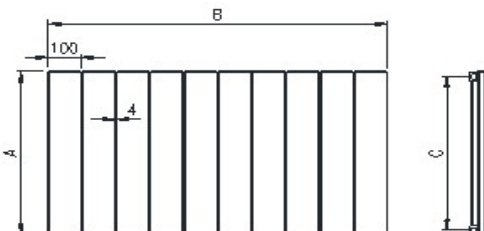



 
 

 
 











# BELVA (SINGLE/DOUBLE) INSTALLATION GUIDE



This product must be fitted only by a fully qualified installer.

DESCRIPTION	DESCRIPTION	ILLUSTRATION
 <p><b>RADIATOR x 1</b></p>	Fixing choose the appropriate fixing for the wall material if required	
	PTFE tape	
	Electric drill	
	Masonry drill bit appropriate to the fixings	
	Adjustable spanner	
	Radiator valve hex key	
 <p><b>TOP - RIGHT CLIPS x 1</b></p>	 <p><b>TOP - LEFT CLIPS x 1</b></p>	
 <p><b>BOTTOM - RIGHT CLIPS x 1</b></p>	 <p><b>BOTTOM - LEFT CLIPS x 1</b></p>	
 <p><b>END PLUG x 1</b></p>	 <p><b>FIXING SCREWS x 4</b></p>	
 <p><b>AIR VENT x 1</b></p>	 <p><b>WASHERS x 4</b></p>	
	 <p><b>WALL ANCHORS x 4</b></p>	
	 <p><b>GASKETS x 4</b></p>	

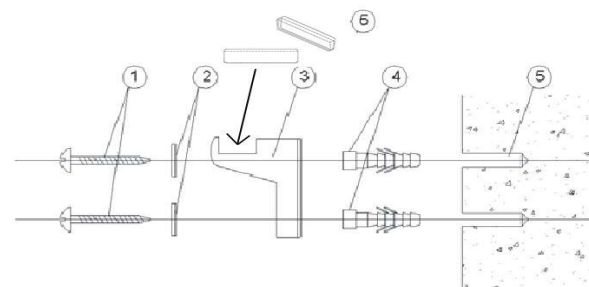


1-	SCREWS
2-	WASHERS
3-	CLIPS (BRACKETS)
4-	WALL ANCHORS
5-	WALL
6-	GASKET

**ATTENTION** : Gaskets must be placed as shown

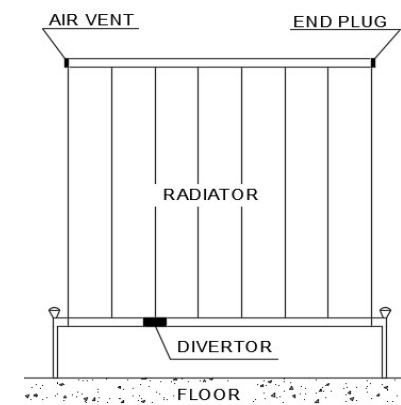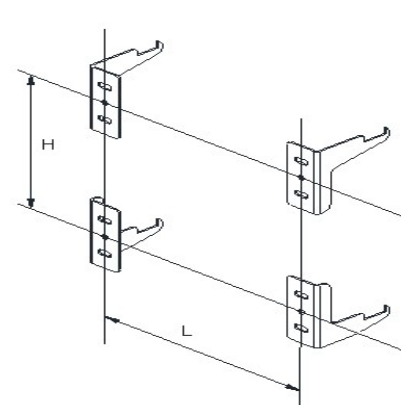

NAMES	A	B	C	TUBE QTY	DA	DM	DO	H	L
BELVA (SINGLE)	600	412	545	4	25	34	68	480	170
BELVA (SINGLE)	600	620	545	6	25	34	68	480	378
BELVA (SINGLE)	600	828	545	8	25	34	68	480	576
BELVA (SINGLE)	600	1036	545	10	25	34	68	480	774
BELVA (SINGLE)	600	1244	545	12	25	34	68	480	972
BELVA (SINGLE)	600	1452	545	14	25	34	68	480	1170
BELVA (SINGLE)	1800	308	1745	3	25	34	68	1680	66
BELVA (SINGLE)	1800	412	1745	4	25	34	68	1680	170
BELVA (SINGLE)	1800	516	1745	5	25	34	68	1680	274
BELVA (DOUBLE)	600	412	545	4	21	55	89	480	170
BELVA (DOUBLE)	600	620	545	6	21	55	89	480	378
BELVA (DOUBLE)	600	828	545	8	21	55	89	480	586
BELVA (DOUBLE)	600	1036	545	10	21	55	89	480	794
BELVA (DOUBLE)	600	1244	545	12	21	55	89	480	1002
BELVA (DOUBLE)	600	1452	545	14	21	55	89	480	1210
BELVA (DOUBLE)	1800	308	1745	3	21	55	89	1680	66
BELVA (DOUBLE)	1800	412	1745	4	21	55	89	1680	170
BELVA (DOUBLE)	1800	516	1745	5	21	55	89	1680	274

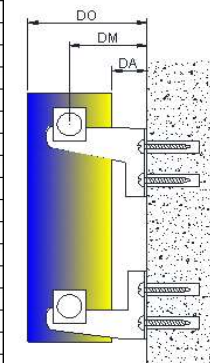

## GENERAL RECOMMENDATION

- Before fitting the radiator it is necessary to wash out the heating system to remove any existing mud, scale, work residues, traces of flux, oil, etc.
- When the system water pH is outside the 5,5-8,5 range and/or when the dissolved is above 0,1mg/liter, it is always needed to protect the heating system components (the radiator is one of these) with a proper chemical treatment compatible with all parts in contact with water (silicon rubber too).
- In order to fit the radiator to the wall, it is necessary to choose the proper fixings for the wall material.
- If the system water exceeds 50°C, please install a warning mark near the radiator to avoid any accidental scalding.
- Clean the radiator surface only with a soft cloth to avoid scratching the finish and do not use chemical againts during cleaning operations. It is prohibited to climb onthe radiator.
- Maximum working temperature 95°C, maximum working pressure 4 bar.