


Tools & Material Required	Key	Component	Qty
Allen key - 12mm	Α	Manual Body (flow)	1
Adjustable Spanner	В	Manual Body (return)	1
	С	Nut	2
	D	Valve Tail (1/2" BSP)	2
	E	Compression Fitting (15mm)	2

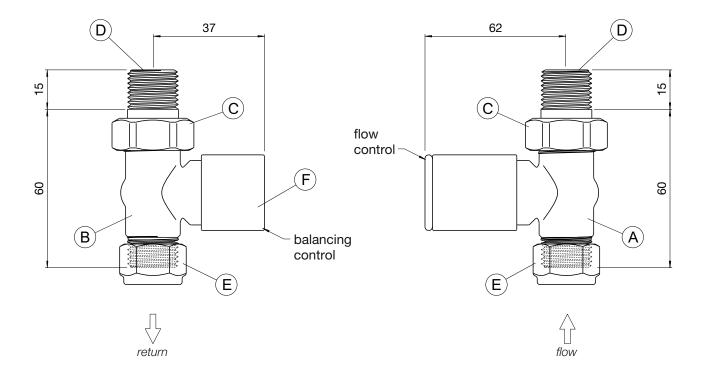

Fitting Instructions

Fit valve tails (D) to radiator using 12mm Allen key, ensuring nut (C) is in place.

Note: over-tightening of valve tails may cause damage to surface finish of radiator connections. Do not use grips.

Loosen compression fittings (E) and apply valve bodies (A) & (B) to 15mm pipe tails.

Install radiator onto bracket mountings and tighten valve tails (D) onto valve bodies (A) & (B).

Tighten compression fittings (E).

After filling and venting radiator, remove cap (F) and adjust balancing control to balance radiator.



