# **PAXTON**

- Italian design & manufacture, horizontal & vertical models
- Combines low water content with high thermal efficiency
- Standard Textured Matt White RAL 9016 delivered in 48-72 hours
- 25 RAL colours, 8 special finishes, up to 15 working days (page 11))







#### **Sizes and Prices**


Dimensions (mm)		Flements	Output Δt 50°c		Product Code
Height	Width	Liements	Watts	Btu's	Floudet Code
Horizontal					
526	790	10	1050	3583	PAXT527910H
	948	12	1260	4299	PAXT529412H
	1106	14	1470	5016	PAXT521114H
	1264	16	1680	5732	PAXT521216H
	1422	18	1890	6449	PAXT521418H
626	790	10	1222	4169	PAXT627910H
	948	12	1466	5002	PAXT629412H
	1106	14	1711	5838	PAXT621114H
	1264	16	1955	6670	PAXT621216H
	1422	18	2200	7506	PAXT621418H
Vertical					
1826	316	4	1206	4115	PAXT183104V
	395	5	1507	5142	PAXT183905V ♦
	474	6	1808	6169	PAXT184706V
	553	7	2110	7199	PAXT185507V

#### **Pipe Centres and Technical Drawings**



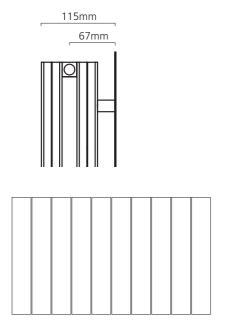

Top view




Pipe centres left to right = Width - 10mm plus valves Pipe centres from wall = 67mm Depth from wall = 115mm




# Supplies4Heat

# **PAXTON**Fitting Instructions





## **Drawings**

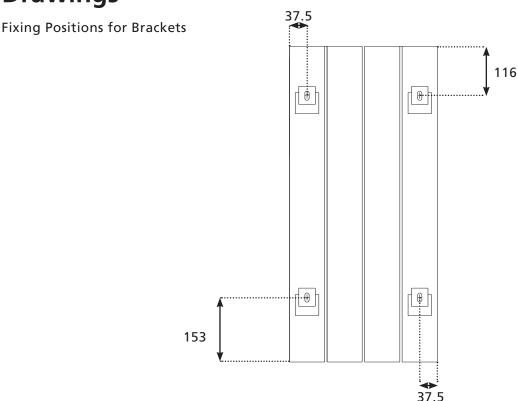

# **Pipe Centres**

Pipe centres left to right = width minus 10mm plus valves

Pipe centres from wall = 67mm

Depth from wall = 115mm

# 1. Unpack & Inspect

This product should have reached you in perfect condition. Please carefully unpack and inspect this radiator and all fittings. Your point of purchase must be notified of any shortages or damage within 28 days of delivery. For further information please see terms and conditions on reverse.

#### 2. Contents

You should have:

- 1 Radiator
- 4 Brackets with plastic saddles
- 1 Airvent
- 1 Rubber Diverter (radiators over 1m high)
- 3 Blanking plugs

#### You will need:

- Tape measure
- Electric drill and bits
- Spirit level
- Airvent key
- Appropriate wall fixings
- Flat blade screwdriver
- Spanner for valves & vents

## 3. Installing radiator


Refer to diagrams overleaf when installing

- 1. Place radiator on floor leaning up against wall in desired position.
- 2. Mark Position of both sides of radiator
- **3.** Measure inwards of your marks 37.5mm, this will give vertical lines for mounting brackets.
- Mark desired height of the top of the radiator & the bottom of the radiator.
- **5.** Mount bracket backing plates 116mm down from the top and 153mm up from the bottom of radiator as per diagram overleaf
- 6. Ensure the plastic saddles are inserted on the brackets
- 7. Hang the radiator

## 4. Fitting the diverter

Please note a rubber diverter is only required on radiators over 1 meter high (please refer to drawings and instructions opposite).

## 4. Fitting the diverter (continued)

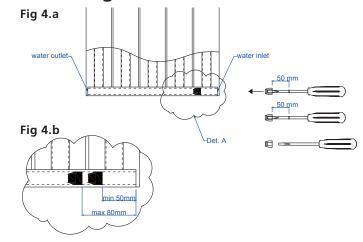

- 1. Take a flat blade screwdriver.
- 2. Insert it into the hole of the diverter and mark the specified dimension as per (Fig 4.a)
- **3.** Insert the diverter from the side of the water inlet, passing the first element (**Fig 4.b**)

### 5. Commission Radiator

Please Note: In accordance with Part L1 2006 of the Building Regulations and BS7593:1992 code of practice for the treatment of hot water and central heating systems, we strongly recommend flushing the heating system post installation of new radiators and then adding the correct quantity and type of inhibitor for use with your radiator and system to prevent corrosion. Damage caused to systems not protected by a suitable inhibitor will not be covered by manufacturer's guarantee.

## **Technical Specifications**

Materials Aluminium

**Connections** ½" flow and return.

Test pressure9 BarTesting authorityEN442Maximum operating pressure6 BarMaximum working temperature90 °C

**Packaging** Polystyrene protection in cardboard box

**PLEASE NOTE:** To reduce the possibility of noise caused by rapid heating and cooling of aluminium radiators; adequate capacity for expansion must be provided within the overall heating system. Systems using micro bore pipework must have adequate pressure and flow rates for the number and style of radiators on the system.

## **Guarantees & Liabilities**

This product is guaranteed for 5 years. As we are not the manufacturers of this product we will take all reasonable endeavours to make over to you the benefit of any warranty or guarantee given by the manufacturer.

The guarantees in all cases are subject to the products being installed in accordance with British and or European standards as well as these fitting instructions. The guarantees in all cases are restricted to the free of charge replacement or repair of the failed product only. Our liability will under no circumstances extend beyond the repair or replacement of the product supplied by us. Claims for either labour in replacement or damage to property are not admissible. Any goods that are returned, in the event of a problem, will belong to us.

## **Terms & Conditions**

All products must be inspected once removed from the packaging and your point of purchase notified within 28 days of delivery of any scratches, blemishes or other damage. Your point of purchase will then agree appropriate action.

Imperfect radiators should therefore not be fitted and we will not accept responsibility for replacement of scratched or damaged radiators once they have been fitted. This includes any consequential loss or cost of fitting.

If we are not notified within 28 days of the date on the signed delivery note then it will be deemed that we have fully complied with our obligations and claims will not be considered.

Failure to comply with any of the above may invalidate any claims. We recommend that after you check the product on delivery that it is stored in its packaging to prevent damage prior to installation, we cannot accept responsibility for items damaged after delivery.

For full details of our Terms and Conditions please visit www.supplies4heat.co.uk or call us on 01342 306880.