

Athena



Horizontal 410mm x 1200mm in RAL 8019 with Nickel Corner Ideal TRV's



Vertical 1800mm x 410mm in White RAL 9016 with White Corner Ideal TRV's



Athena shown on pages 58-59

Steel; Slimline radiator
UKCA approved & certified to BS EN442

White RAL 9016 as standard, 188 RAL colours plus 30 Special Finishes
Please call **01342 302250** for a RAL or Special Finish chart

Stock White RAL 9016: 48-72 Hours
Made to Order sizes & colours: Up to 7 weeks for white
Up to 8 weeks for colours

Pipe centres left to right	Pipe centres from wall	Depth from wall
width - 70mm	45mm to 53mm	67mm to 75mm




SAVE MONEY! WHEN YOU BUY OUR **IDEAL TRV KIT** WITH ANY DESIGNER ORDER*QUOTE **PROMOVI** AT TIME OF ORDER
Available in White or Chrome



Stock options White RAL 9016 - Horizontal

Height (mm)	Width (mm)	Model	Watts $\Delta t\ 50^{\circ}c$	Btu's $\Delta t\ 50^{\circ}c$
410	1000	ATHEH4110	392	1338
	1200	ATHEH4112	474	1617
495	1000	ATHEH4910	460	1570
	1200	ATHEH4912	553	1887

67-75
45-53

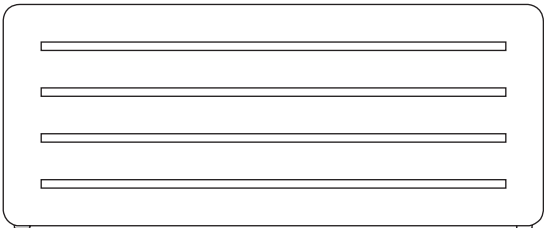


Made to order options - Horizontal

Height (mm)	Width (mm)	Model	Watts $\Delta t\ 50^{\circ}c$	Btu's $\Delta t\ 50^{\circ}c$
410	1500	ATHEH4115	570	1945
495	1500	ATHEH4915	694	2368

Stock options White RAL 9016 - Vertical

Height (mm)	Width (mm)	Model	Watts $\Delta t\ 50^{\circ}c$	Btu's $\Delta t\ 50^{\circ}c$
1800	410	ATHEV1841	686	2341
	495	ATHEV1849	837	2856

67-75
45-53

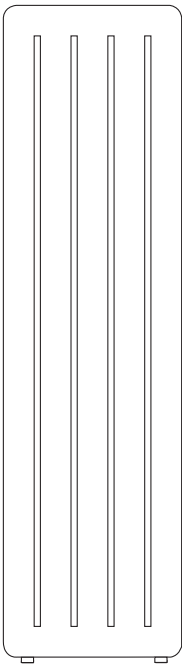

Made to order options - Vertical

Height (mm)	Width (mm)	Model	Watts $\Delta t\ 50^{\circ}c$	Btu's $\Delta t\ 50^{\circ}c$
1500	410	ATHEV1541	575	1962
	495	ATHEV1549	697	2378

*Saving based on the value of individual items when bought separately. Order any of our selected valves & matching pipe covers at the same time as your radiator; PROMOVIW (white), PROMOVIC (chrome).

Technical Specifications

Materials	Steel
Connections	1/2" flow and return, underneath connections
Test Pressure	6 Bar
Testing Authority	EN442
Maximum operating pressure	4 Bar
Maximum working temperature	95°C
Packaging	Polystyrene protection in cardboard box

PLEASE NOTE: Systems using micro bore pipework must have adequate pressure and flow rates for the number and style of radiators on the system.

Terms & Conditions

All products must be inspected once removed from the packaging and The Radiator Company notified within 28 days of delivery of any scratches, blemishes or other damage. The Radiator Company will then replace the radiator.

Imperfect radiators should therefore not be fitted and The Radiator Company will not accept responsibility for replacement of scratched or damaged radiators once they have been fitted. This includes any consequential loss or cost of fitting.

If The Radiator Company are not notified within 28 days of the date on the signed delivery note then it will be deemed that The Radiator Company have fully complied with its obligations and claims will not be considered.

Failure to comply with any of the above may invalidate any claims.

We recommend that after you check the product on delivery that it is stored in its packaging to prevent damage prior to installation. The Radiator Company cannot accept responsibility for items damaged after delivery.

Guarantees & Liabilities

As we are not the manufacturers of this product we will take all reasonable endeavours to make over to you the benefit of any warranty or guarantee given by the manufacturer, which is usually five years on most of our range. (Copies of specific guarantees for any of our products are available on request).

The guarantees in all cases are subject to the products being installed in accordance with British and or European standards as well as these fitting instructions. The guarantees in all cases are restricted to the free of charge replacement or repair of the failed product only. Our liability will under no circumstances extend beyond the repair or replacement of the product supplied by us. Claims for either labour in replacement or damage to property are not admissible. Any goods that are returned, in the event of a problem, will belong to The Radiator Company.

Fittings Instructions




Please read these instructions and terms and conditions carefully prior to installation. Failure to do so may invalidate the warranty

The Radiator Company
Units 13 - 14 Charlwoods Road
East Grinstead
West Sussex
RH19 2HU




ATHEH_IR_1.0

Diagrams of Athena Horizontal

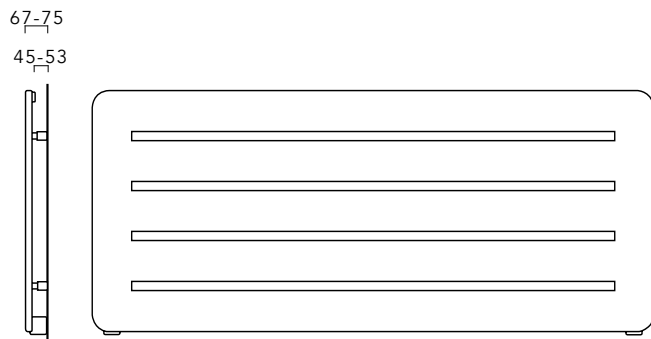

Bracket Positions

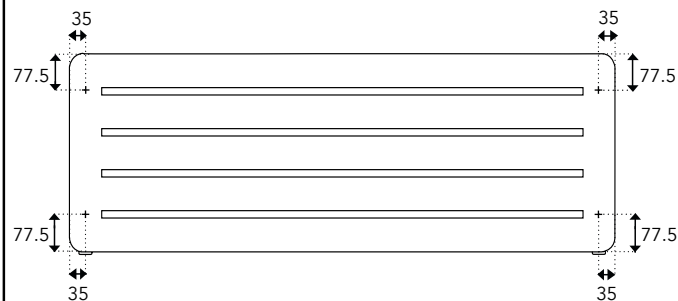

Pipe Centres

Pipe centres left to right	width minus 70mm
Pipe centres from wall	45mm to 53mm
Depth from wall	67mm to 75mm


1 Unpack & Inspect

The Radiator Company prides itself on selecting products from manufacturers who exercise tight quality control measures.

We only select models with excellent standards of welding and brazing, as well as high quality finishes.

All of our products are well packaged and should reach you in perfect condition. Just in case however, we offer a minimum 5-year no quibble guarantee for all radiators and towel rails.

The Radiator Company must be notified of any shortages or damage within 28 days of delivery.

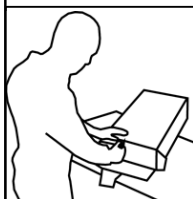

For further information please see terms and conditions on back page.

2 Contents

You should have:


- 1 Radiator
- 4 Wall bracket Nipples
- 4 Wall brackets Sleeves
- 4 Grub Screws
- 1 Airvent
- 1 Blanking Plug

You will need:

- Tape measure
- Electric drill
- Suitable drill bit and plugs
- Spirit level

3 Fix Brackets

1. Insert bracket nipples into threaded holes on the back of the radiator.
2. The fixing positions for the two top brackets are measured down 77.5mm from the top of the radiator and 35mm in from the edges of the radiator. Mark the positions on the wall and hold up your radiator to check the positions.
3. Ensure the markings are level, and using a suitable drill bit and plugs, fix the top two bracket sleeves to the wall.
4. For accuracy, we suggest hanging the radiator on the top two brackets, then marking the bottom bracket positions.
5. Remove the radiator off the wall and fix the bottom two brackets to the wall.

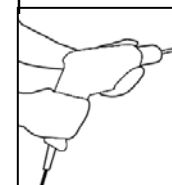

PLEASE NOTE:

It is essential that all brackets are level to ensure a vertical alignment for connecting the pipework.

4 Hang Radiator & Commission

6. Hold up the radiator to the wall and slot the four bracket nipples into the bracket sleeves.
7. Use the provided grub screws to secure the radiator by inserting and tightening on the side of the brackets.

Please Note:

In accordance with Part L1 2006 of the Building Regulations and BS7593:1992 code of practice for the treatment of hot water and central heating systems, we strongly recommend flushing the heating system post installation of new radiators and then adding the correct quantity and type of inhibitor for use with your radiator and system to prevent corrosion. Damage caused to systems not protected by a suitable inhibitor will not be covered by manufacturer's guarantee.

Technical Specifications

Materials	Steel
Connections	1/2" flow and return
Test Pressure	6 Bar
Testing Authority	EN442
Maximum operating pressure	4 Bar
Maximum working temperature	95°C
Packaging	Polystyrene protection in cardboard box

PLEASE NOTE: Systems using micro bore pipework must have adequate pressure and flow rates for the number and style of radiators on the system.

Terms & Conditions

All products must be inspected once removed from the packaging and The Radiator Company notified within 28 days of delivery of any scratches, blemishes or other damage. The Radiator Company will then replace the radiator.

Imperfect radiators should therefore not be fitted and The Radiator Company will not accept responsibility for replacement of scratched or damaged radiators once they have been fitted. This includes any consequential loss or cost of fitting.

If The Radiator Company are not notified within 28 days of the date on the signed delivery note then it will be deemed that The Radiator Company have fully complied with its obligations and claims will not be considered.

Failure to comply with any of the above may invalidate any claims.

We recommend that after you check the product on delivery that it is stored in its packaging to prevent damage prior to installation. The Radiator Company cannot accept responsibility for items damaged after delivery.

Guarantees & Liabilities

As we are not the manufacturers of this product we will take all reasonable endeavours to make over to you the benefit of any warranty or guarantee given by the manufacturer, which is usually five years on most of our range. (Copies of specific guarantees for any of our products are available on request).

The guarantees in all cases are subject to the products being installed in accordance with British and or European standards as well as these fitting instructions. The guarantees in all cases are restricted to the free of charge replacement or repair of the failed product only. Our liability will under no circumstances extend beyond the repair or replacement of the product supplied by us. Claims for either labour in replacement or damage to property are not admissible. Any goods that are returned, in the event of a problem, will belong to The Radiator Company.



Athena Vertical

Fittings Instructions




Please read these instructions and terms and conditions carefully prior to installation. Failure to do so may invalidate the warranty

The Radiator Company
Units 13 - 14 Charlwoods Road
East Grinstead
West Sussex
RH19 2HU




ATHEV_IR_1.0

Diagrams of Athena Vertical

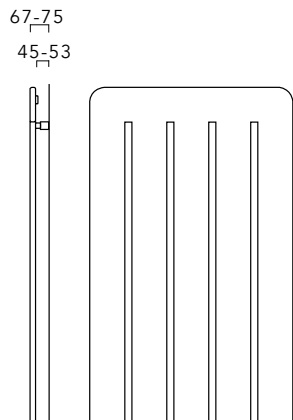

Bracket Positions

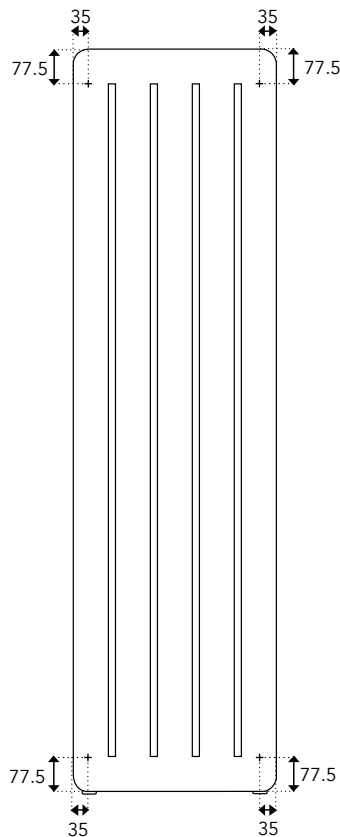

Pipe Centres

Pipe centres left to right	width minus 70mm
Pipe centres from wall	45mm to 53mm
Depth from wall	67mm to 75mm


1 Unpack & Inspect

The Radiator Company prides itself on selecting products from manufacturers who exercise tight quality control measures.

We only select models with excellent standards of welding and brazing, as well as high quality finishes.

All of our products are well packaged and should reach you in perfect condition. Just in case however, we offer a minimum 5-year no quibble guarantee for all radiators and towel rails.

The Radiator Company must be notified of any shortages or damage within 28 days of delivery.

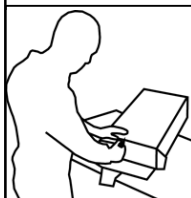

For further information please see terms and conditions on back page.

2 Contents

You should have:


- 1 Radiator
- 4 Wall bracket Nipples
- 4 Wall brackets Sleeves
- 4 Grub screws
- 1 Airvent
- 1 Blanking Plug

You will need:

- Tape measure
- Electric drill
- Suitable drill bit and plugs
- Spirit level

3 Fix Brackets

1. Insert bracket nipples into threaded holes on the back of the radiator.
2. The fixing positions for the two top brackets are measured down 77.5mm from the top of the radiator and 35mm in from the edge of the radiator. Mark the positions on the wall and hold up your radiator to check the positions.
3. Ensure the markings are level, and using a suitable drill bit and plugs, fix the top two bracket sleeves to the wall.
4. For accuracy, we suggest hanging the radiator on the top two brackets, then marking the bottom bracket positions.
5. Remove the radiator off the wall and fix the bottom two brackets to the wall.

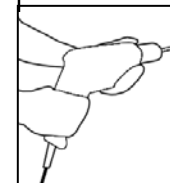

PLEASE NOTE:

It is essential that all brackets are level to ensure a vertical alignment for connecting the pipework.

4 Hang Radiator & Commission

6. Hold up the radiator to the wall and slot the four bracket nipples into the bracket sleeves.
7. Use the provided grub screws to secure the radiator by inserting and tightening on the side of the brackets.

Please Note:

In accordance with Part L1 2006 of the Building Regulations and BS7593:1992 code of practice for the treatment of hot water and central heating systems, we strongly recommend flushing the heating system post installation of new radiators and then adding the correct quantity and type of inhibitor for use with your radiator and system to prevent corrosion. Damage caused to systems not protected by a suitable inhibitor will not be covered by manufacturer's guarantee.