





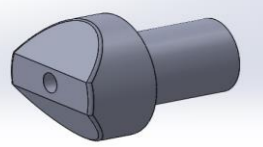

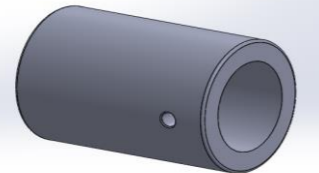

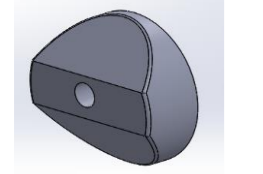
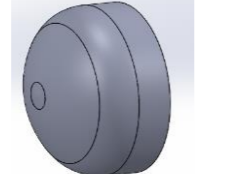






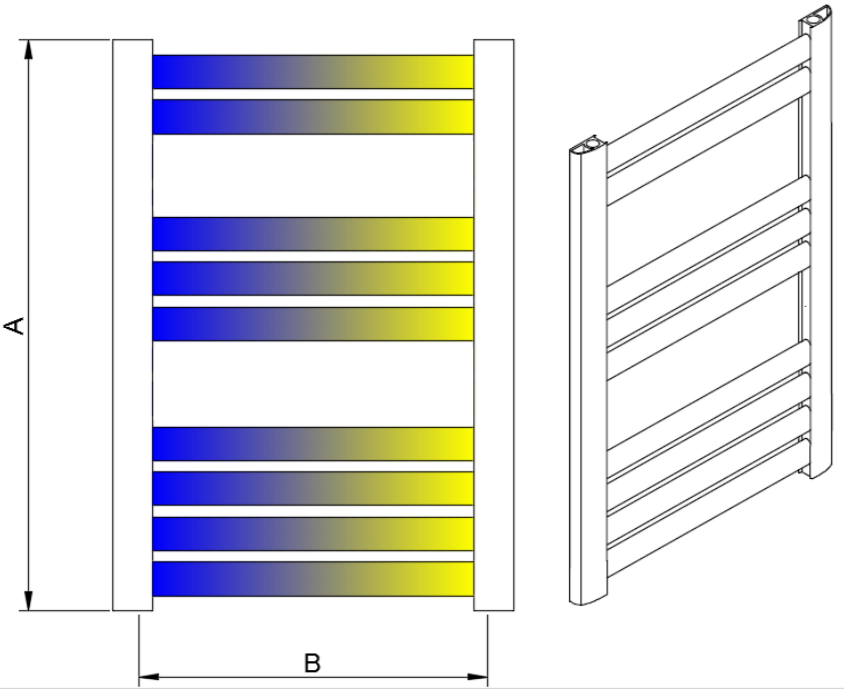


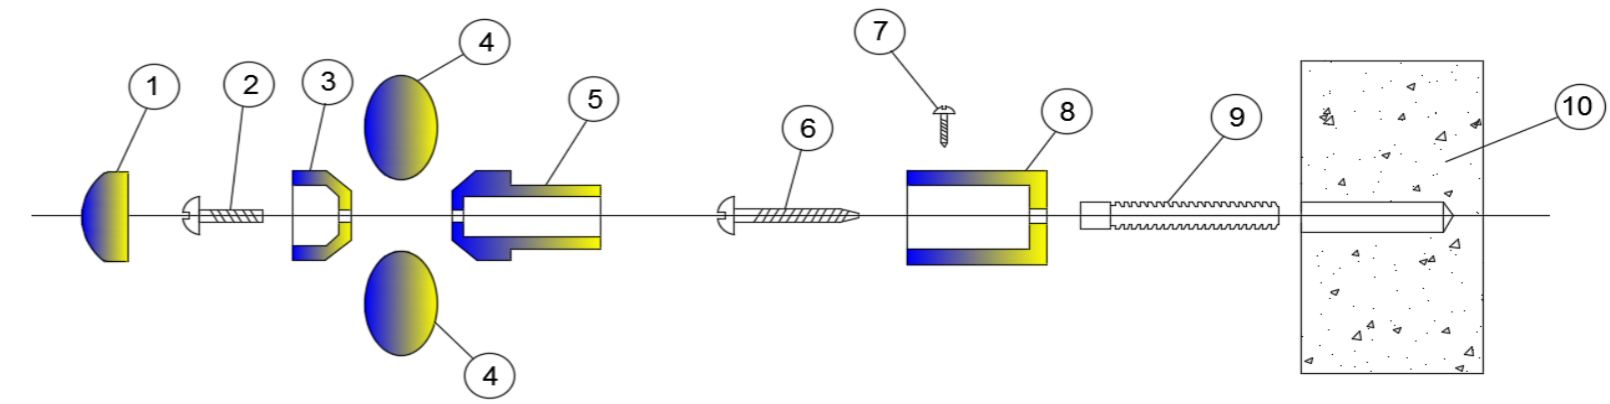




ANITA INSTALLATION GUIDE

This product must be fitted only by a fully qualified installer.

| DESCRIPTION | DESCRIPTION | ILLUSTRATION |
|--|--|---|
|  <p>RADIATOR x 1</p> | Fixing choose the appropriate fixing for the wall material if required |  |
| | PTFE tape |  |
| | Electric drill |  |
| | Masonry drill bit appropriate to the fixings |  |
| | Adjustable spanner |  |
|  | Radiator valve hex key |  |
|  | WALL BRACKETS x 4 |  |
|  | FIXING BRACKETS x 4 | |
|  | BRACKET COVER x 4 |  |
|  | END PLUG x 1 | |
|  | RAD. SCREWS x 4 |  |
|  | WALL SCREWS x 4 | |
|  | AIR VENT x 1 |  |
|  | WALL ANCHORS x 4 | |
|  | FIXING SCREWS x 4 | |



| | |
|----|----------------|
| 1 | BRACKET COVER |
| 2 | RAD. SCREW |
| 3 | FIXING BRACKET |
| 4 | RADIATOR |
| 5 | RAD. BRACKET |
| 6 | WALL SCREW |
| 7 | FIXING SCREW |
| 8 | WALL BRACKET |
| 9 | WALL ANCHOR |
| 10 | WALL |

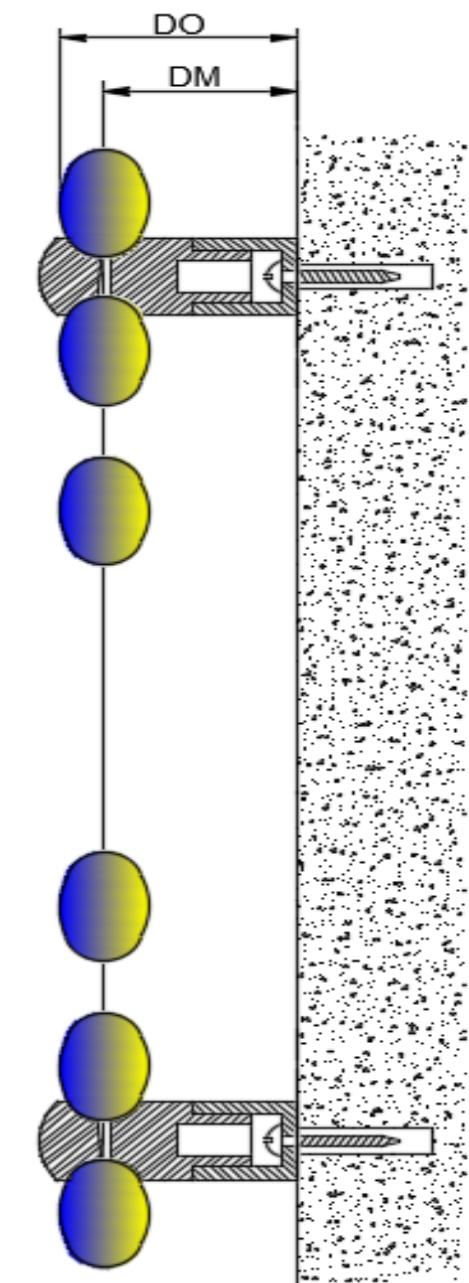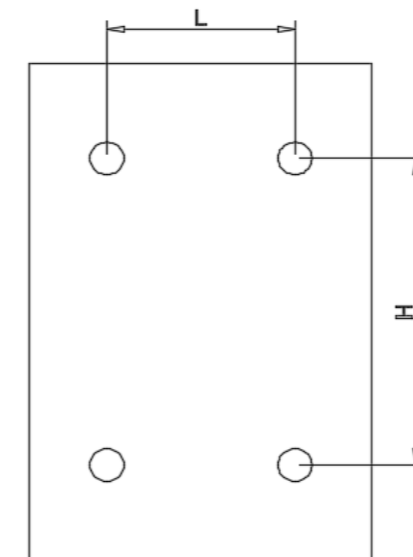

| NAMES | A | B | TUBE (QTY) | DM | DO | H | L |
|-------|------|-----|------------|-------|--------|------|-----|
| ANITA | 835 | 455 | 9 | 70-90 | 85-105 | 615 | 355 |
| ANITA | 1195 | 455 | 15 | 70-90 | 85-105 | 1050 | 355 |
| ANITA | 1510 | 455 | 18 | 70-90 | 85-105 | 1365 | 355 |

GENERAL RECOMMENDATION

- Before fitting the radiator it is necessary to wash out the heating system to remove any existing mud, scale, work residues, traces of flux, oil, etc.
- When the system water pH is outside the 5,5-8,5 range and/or when the dissolved is above 0,1mg/liter, it is always needed to protect the heating system components (the radiator is one of these) with a proper chemical treatment compatible with all parts in contact with water (silicon rubber too).
- In order to fit the radiator to the wall, it is necessary to choose the proper fixings for the wall material.
- If the system water exceeds 50°C, please install a warning mark near the radiator to avoid any accidental scalding.
- Clean the radiator surface only with a soft cloth to avoid scratching the finish and do not use chemical agents during cleaning operations. It is prohibited to climb on the radiator.
- Maximum working temperature 95°C, maximum working pressure 4 bar.